Digital Force Gauges Series 3

32-1121 REV 0219 Page 1 of 3

Series 3

24.80 SP X PK 5.26 X

-5.26

PC LIBF
MARK - I D

MENU
MACH SERIES N

MODE

Force Gauge
Model M3-10

TO LIBF IS KOE! ON

TO LIBF IS KOE! ON

CE

To MACH Lane y Man-20

Tall Told

Series 3 digital force gauges are designed for tension and compression force testing in numerous applications from 0.12 lbF to 500 lbF (0.5 N to 2500 N). The gauges feature a sampling rate of

2,000 Hz, producing accurate results under a wide range of test conditions. A backlit graphic LCD displays large characters, and a menu is available to access the gauges' features and configurable parameters. USB output is provided for data collection purposes.

Set point indicators are provided for pass-fail testing. The gauges are overload protected to 200% of capacity, and an analog load bar is shown on the display for graphical representation of applied force.

An ergonomic, reversible aluminum housing allows for hand held use or test stand mounting for more sophisticated testing requirements. Series 3 digital force gauges are directly compatible with Mark-10 test stands, grips, and software.

Series 3 gauges include MESUR™ Lite data acquisition software, for tabulation of continuous or individual data points. One-click export to Excel button easily allows for further data manipulation.



Shown with an ES20 test stand and G1061 wedge grips

Features

MESUR Lite data acquisition software is


■ High-speed 2,000 Hz sampling rate

included with Series 3 gauges

- USB data output of continuous or individual data points
- Ultra-compact size
- Large backlit graphic display
- Programmable set points with pass/fail indicators
- Live load bar graph with set point markers
- Peak readings and set points always displayed
- Configurable audio alarms and key tones
- 4 selectable units of measurement
- MESUR[™] Lite data collection software included









Digital Force Gauges Series 3


32-1121 REV 0219 Page 2 of



Specifications

Accuracy:	$\pm 0.3\%$ of full scale			
Sampling Rate:	2,000 Hz			
Power:	AC or rechargeable battery. Multi-step low battery indicator is displayed, gauge shuts off automatically when power is too low.			
Battery life:	Backlight on / off: up to 7 / 24 hours of continuous use			
USB Output:	Configurable to 115,200 baud.			
Safe overload:	200% of full scale (display shows "OVER" at 110% and above)			
Weight (gauge only):	M3-012 - M3-100: 0.7 lb [0.33 kg] M3-200 - M3-500: 0.9 lb [0.41 kg]			
Load cell deflection:	All models 0.010 [0.25], except 0.005 [0.13] for M3-012			
Included items:	Carrying case with chisel, cone, V-groove, hook, flat, extension rod, universal voltage AC adapter, battery, quick-start guide, USB cable, resource CD (USB driver, MESUR™ Lite software, MESUR™gauge DEMO software, user's guide), NIST-traceable certificate of calibration (certificate with data is available for an additional charge).			
Environmental requirements:	40 - 100°F, max. 96% humidity, non-condensating			
Warranty:	3 years (see individual statement for further details)			

Dimensions in [mm]

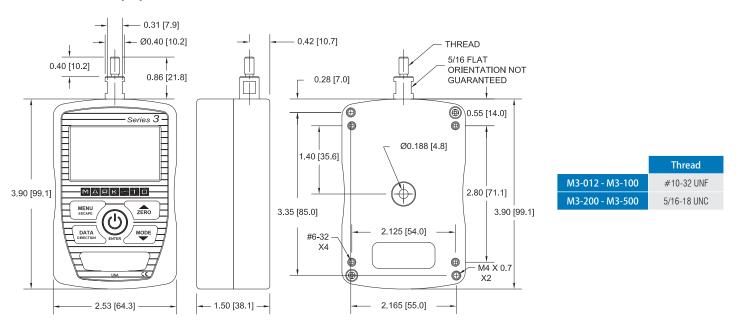

Mark-10 Corporation ■ www.mark-10.com ■ info@mark-10.com Toll-free: 888-MARK-TEN ■ Tel: 631-842-9200 ■ Fax: 631-842-9201



Digital Force Gauges Series 3

32-1121 REV 0219 Page 3 (

In The Box



Series 3 force gauges are shipped as shown at left, and include the following accessories:

- (1) Extension rod *
- (1) Hook *
- (1) Cone *
- (1) Chisel *
- (1) V-Groove *
- (1) Flat *
- (1) Coupling *
- (1) Carrying case
- (1) USB cable
- (1) AC adapter
- (1) Resource CD
- * The specific accessory depends on the force gauge model. Refer to the website for details.

Capacity & Resolution

Model	lbF	kgF	gF	N
M3-012	0.12 x 0.0001	-	50 x 0.05	0.5 x 0.0005
M3-025	0.25 x 0.0002	-	100 x 0.1	1 x 0.001
M3-05	0.5 x 0.0005	-	250 x 0.2	2.5 x 0.002
M3-2	2 x 0.002	1 x 0.001	-	10 x 0.01
M3-5	5 x 0.005	2.5 x 0.002	-	25 x 0.02
M3-10	10 x 0.01	5 x 0.005	-	50 x 0.05
M3-20	20 x 0.02	10 x 0.01	-	100 x 0.1
M3-50	50 x 0.05	25 x 0.02	-	250 x 0.2
M3-100	100 x 0.1	50 x 0.05	-	500 x 0.5
M3-200	200 x 0.2	100 x 0.1	-	1000 x 1
M3-500	500 x 0.5	250 x 0.2	-	2500 x 2

Certificate of calibration with data is available. Part no. is: CERT.

All models include 110V AC adapters, unless ordered as below:

Add suffix 'E' for euro plug (220V), 'U' for UK plug (220V) or 'A' for Australian plug (220V).

Example: M3-05E, M3-100U, M3-500A



